930/940/965 additional data

In addition to the 555 patterns programmed into the KH-930/940/965 knitting machines there are additional patterns permanently programmed into the machine that are not covered in Stitch World. Diagrams are on other side.


Pattern #	Sts.	Rows	
556-600			Nothing
601-626		16	A to Z (upper case)
627-652		16	a to z (lower case)
653	2	2	Period
654-700	1		Nothing
701	115	34	* brother
702	57	14	* KH-930
703	` 11	6	Braid: needle setup
	· st		Y5-G6 (xxxooxooxxx) KCII and TUCK buttons in
704-880	Ì		930/940 = Nothing
			965 = 801-859 Stitch World Book II patterns
881	; 2	2	EON EOR
882	10	10	See diagrams
. 883 🔻	્ર16	16	See diagrams
884	5	5	See diagrams
885	} -		Circuit Test: The voltage should be 176 or 192.
	, ŝ.		This test can check the voltage of the left sensor by
(e)			pushing the "yellow" key for the left and the "green"
*	*		key for the right. Mis-selection can occur if the
			wrong numbers appear in the window.
886-887	4		Nothing
888	* 4;		Memory Test: The computer will test the memory.
	4, 1		WARNING!!! ail memory of manually programmed
			designs will be erased!
889	;		Display Key Test: 930 = the lights will blink.
	() 		940 = the lights will go out and not come back on.
	4		This will indicate the function of each key is well
	4.		connected and that the PC board is functioning.
890-999	V.	,	Nothing

If 888 keeps flashing: Press the STEP and INPUT buttons at the same time. **Warning!!!** all manually programmed designs will be erased!

* These 2 patterns were used by the factory for the sample banners; you may make your own banners using these patterns.

Information was gathered from the PPD manual and Wendie Ballinger of Special Stitches in Decatur, IL by Nella Ten Broeke, a member of Grand Rapids Area Machine Knitters Club, Inc. **Please feel free to copy.** 11-8-94



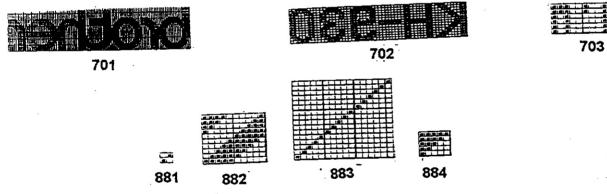

Other characters that are in the PPD cartridge (not in machine):

